

THRESHOLD MODIFICATION

INSTRUCTIONS

These instructions describe the modifications needed to ensure the product is securely fastened to the sill or floor. These instructions must be performed prior to measuring the size of the opening for ordering to ensure the product fits properly. Any height measurements of the opening must be taken from the top of the metal strip described in these instructions.


1. Select the type of floor or threshold below that most closely matches what's in the opening
2. Measure the width of the opening where the product is to be placed, and subtract 1/4"
3. Cut a 1" wide x 1/8" thick aluminum strip to the cut length above.
4. (Optional): Finish the sides of the strip with Matte black paint.
5. Lay the metal strip on the floor and center horizontally in the opening. Next, position front-to-back where the center of the product will be located. Reference Top Down View below and the ordering guide for product placement instructions and dimensions.
6. If Sloped threshold, cut a piece of hardwood the length of the metal strip and angle to ensure the metal strip is level. Finish as desired.
7. Thoroughly clean and dry all surfaces then glue together using construction adhesive as indicated below. Remove any extra adhesive. Allow to fully cure.

Important: Check Construction Adhesive Label to ensure it's intended to bond both surface types (Metal-Wood or Metal-Stone)


Aggregate Floor



Tile Floor

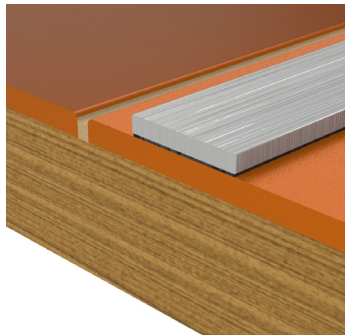

Sloped Sill
Use angled shim under the strip.

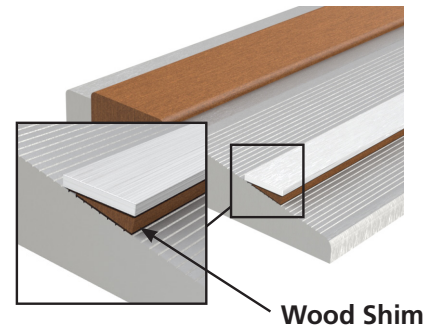

Top Down View
Hardwood threshold shown

